

How to flash a ROM on your BV6000:

Why flashing?


- Update or Downgrade your phone
- Fix Bugs or Bootloop on your phone
- Unbrick your phone if it's bricked

Preparation: What do you need?

- Smartphone BV6000 (Battery loaded 70% or more)
- A Computer with Windows XP or above (Linux is possible but this Tutorial is for Windows)
- ROM for BV6000 – Official ROMs will be announced here:
<http://bbs.blackview.hk/viewforum.php?f=144> – download and unpack .zip file
(You could use software like JDownloader 2 to download and unpack from Mega.nz without problems)
- The Software SP Flash Tool
<http://spflashtools.com/windows/sp-flash-tool-v5-1716> - download and extract to your Hard drive
- VCOM driver – <https://www.google.com/search?q=MT67xx+USB+VCOM+DRIVERS>
Install the drivers. For Windows 8 or newer, you may have to disable “[Driver Signature Verification](#)”. Restart the Computer after Driver installation. Check Windows Device Manager to be sure Driver is installed correct.

Ready! What to do now?

- If possible create a Backup of your personal data which is stored on the phone.
- Power off your phone and disconnect it from the computer
- Start the software by running flash_tool.exe. This is what you will see:

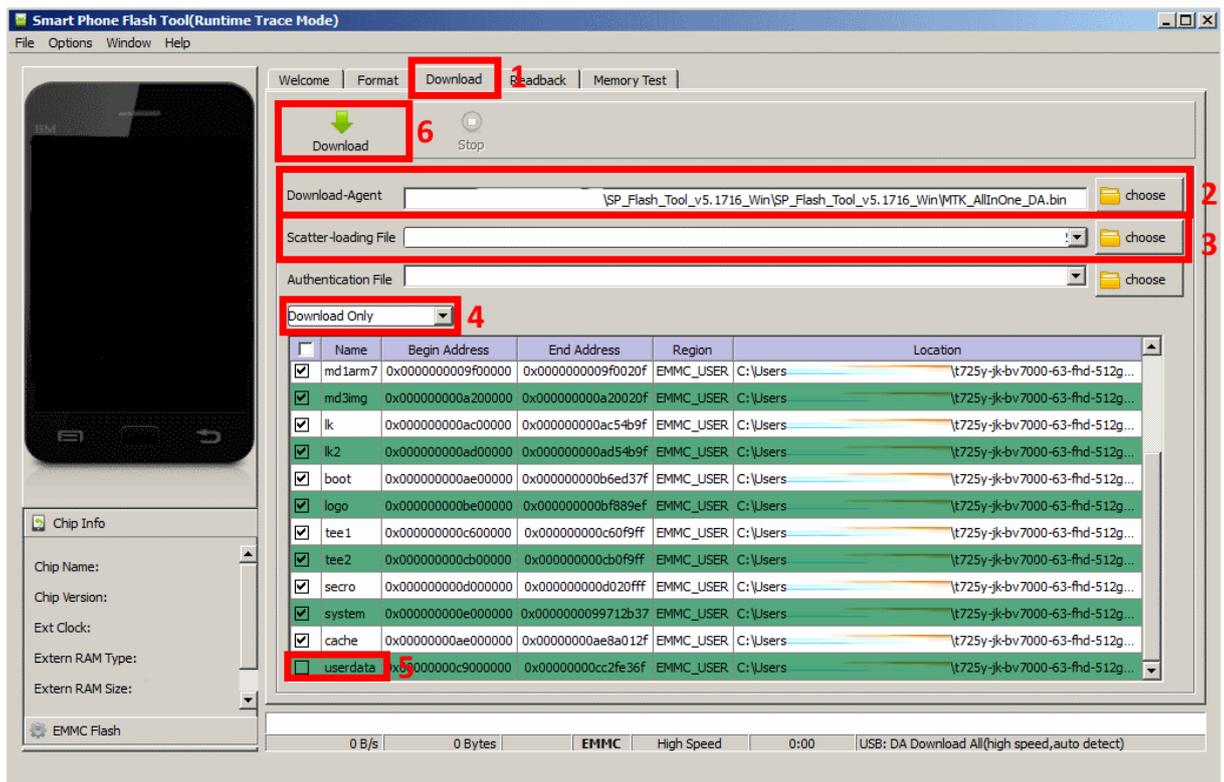

1. Check to be in the Download tab (marked with the red 1 in our screenshot).
2. Select download agent “MTK_AllInOne_DA.bin” which is located in the Flash Tool Folder.
3. Select the scatter file which is located in your ROM Folder
4. Be sure to select “Download only”. Else you could lose your IMEI, MAC-Address, etc.!
5. You can uncheck “userdata” so your data and setting may not be deleted.
But if you flash for bug fixing you should keep this checked.
6. Press Download
7. Connect (powered off) phone to your Computer. Use original cable.
The program will automatical start flashing. White bar below red 5 shows status now.
8. Wait until it's finished. A green checkmark will appear. Don't do anything until this happen.
9. Unplug the phone. Wait some seconds and start your phone.